

LED indicator

EML921/52.7 technical data:

Supply voltage: 10-15V (DC) Data baud rate: 9600 kbps Supported immo system: immo 2

Wiring description:

[+12V] - power supply after ignition switch (Terminal 15)

[K-Line] - Data wire, connected to ECU.


[GND] - Ground.

[!] Emulator supply must be switched in the same time with engine ECU ignition supply.

LED indicator after ignition "on":

LED still off	Incorrect connection, bad power supply of ECU,
	broken ECU, short W line, connected immobilizer box
	(original immobilizer box must be disconnected)
LED go on and after few	Normal condition
seconds goes out	
LED go on and after few	ECU not recognized, incorect boud rate
seconds start blinking	-
LED go on and still light.	ECU not recognized, incorect boud rate


In cars with immobilizer box, emulator install according this diagram:

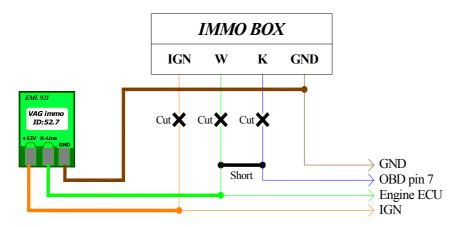


Don't forget connect W and K lines (in diagram connection marked "**short**"). Without connection must be lose engine ECU diagnostic availability.

Thin wires in diagram – original car installation, wide wires – additional wires, must be installed.

Audi 100, A4, A6, A8

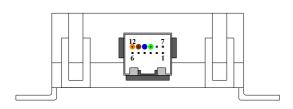

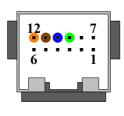

9 – W Line
10 – K Line
11 – GND
12 - IGN


VW Golf III, Passat B4, VW Transporter




VW Sharan, VW Lupo, VW Polo, T4 from *1998*.




VW LT35

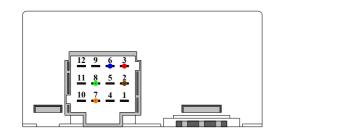

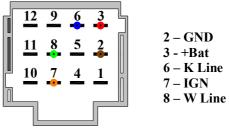

In cars with immobilizer in dashboard, emulator install according this diagrams:

VW Golf IV, Audi A3, A4, A6 (exept Magneti marelli), Passat B5, New beatle

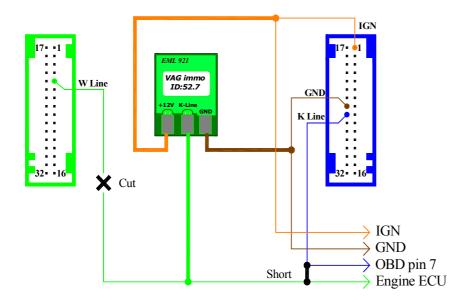

```
Blue connector:

1 – IGN

24 – GND

25 – K Line


Green connector:

5 – W Line
```

Don't forget connect W and K lines (in diagram connection marked "**short**"). Without connection must be lose engine ECU diagnostic availability.

Thin wires in diagram – original car installation, wide wires – additional wires, must be installed.

Audi A3, A6 Magneti marelli (white back panel)

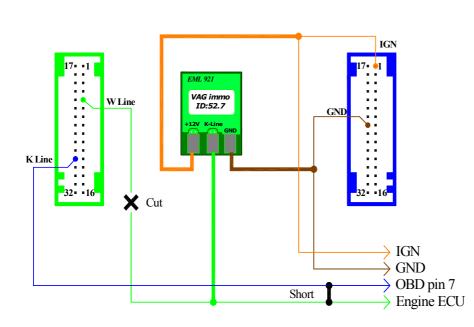

Blue connector: 1 – IGN 24 – GND Green connector: 5 – W Line 28 – K Line

Don't forget connect W and K lines (in diagram connection marked "**short**"). Without connection must be lose engine ECU diagnostic availability.

Thin wires in diagram – original car installation, wide wires – additional wires, must be installed.